

## **Important safety information**

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

### **Warning**

- To charge the battery, only use the detachable supply unit provided with the appliance.
- The supply unit does not contain a transformer, please use a 5V, 1A transformer. Do not use any input higher as this may cause a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.
- This appliance contains batteries that are non-replaceable.

### **Caution**

- Never immerse the charging cable in water and do not rinse it under the tap.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use water which is hotter than 60°C or higher to rinse the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol/alcohol/toluene or acetone to clean the appliance.

### **General**

- This appliance is waterproof. For safety reasons, the appliance can therefore only be used without cord.
- The appliance can be charged through most power banks, computer USB sockets, and laptops.

### **Recycling**

- The appliance shall not be disposed of with normal household waste.
- The appliance contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries.

### **Removing the rechargeable battery**

Only remove the battery when you are going to discard the product. Before you remove the battery, make sure the product is disconnected from the socket and the battery is completely empty. Take any necessary safety precautions when you handle tools to open the product, and when you dispose of the rechargeable battery.

### **Warranty and support**

If you need any information or support, please visit [barberboss.co.uk/contact-us/](http://barberboss.co.uk/contact-us/).

Alternatively, please email us at: [care@barberboss.co.uk](mailto:care@barberboss.co.uk).